



Inswing

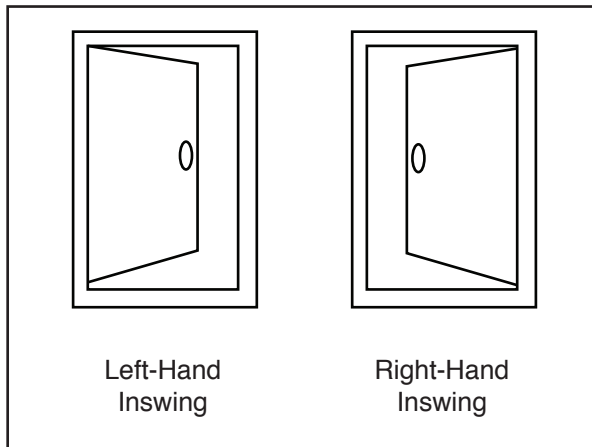

Outswing

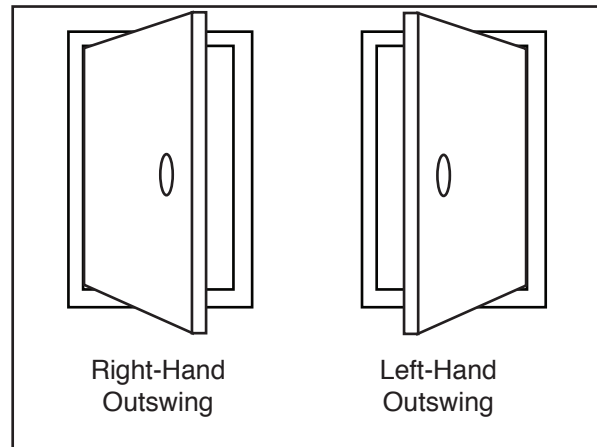

Rough Opening Adders:

Take the size of your door and add the adder to the width and height to get your rough opening size.

* Gives you 1" over

** Gives you 1/2" over

INTERIORS	WIDTH	HEIGHT	EXTERIORS	WIDTH	HEIGHT
Single**	+2	+2-1/8"	Single	+2-1/2"	+3-1/4"
Double w/ Ball Catches**	+2	+2-1/8"	Double w/ T-Astragal*	+3-1/4"	+3-1/4"
Double w/ T-Astragal	+3	+2-1/8"	Single w/ One Sidelight*	+3-1/2"	+3-1/4"
Bifold w/ Frame	+2	+3"	Single w/Two Sidelights*	+4-1/2"	+3-1/4"
Bypass w/ Frame	2	+3"	Double w/One Sidelight*	+4-1/2"	+3-1/4"
Cased Opening	+2	+2-1/8"	Double w/Two Sidelights*	+5"	+3-1/4"
Pocket Frame	x2+2"	+4	Outswing		+2-3/8"
Double Pocket Frame	x4+2 1/2	+4			

